

# NEOSTONE COMPOSITE SHOWER BASES

NEOStone shower bases are made by combining mineral compounds and unsaturated polyester resin and a layer of cutting-edge gel coat, resulting in products with greater durability and impact resistance, as well as significantly reducing weight.


- Textured matte finish
- Two drain styles and three color options
- Shallow threshold height allows bases to be recessed in the floor making entrance and exit easier
- One-piece installation means no grout to replace and reseal

For more information contact your local showroom or email: [info@avalonflooring.com](mailto:info@avalonflooring.com)

## POINT

center drain base


- 48" X 36"
- 48" X 48"
- 60" X 32"
- 60" X 36"
- 60" X 48"

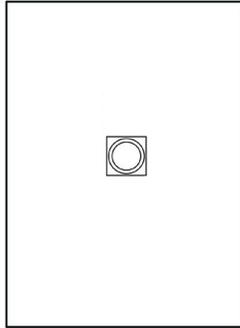

## LINEAR

end drain base

- 48" X 36"
- 60" X 32"
- 60" X 36"
- 60" X 40"

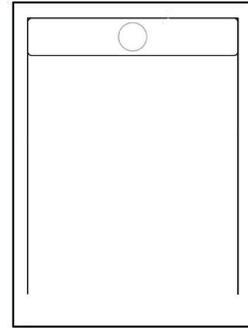

## POINT SHOWER BASE DRAIN COVERS

All Point Shower Bases come with a standard Stainless Steel Grate or upgrade to one of the options below:



White




Beige



Graphite




Polished Nickel

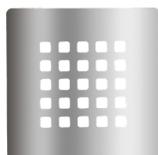


Polished Chrome



Satin Nickel

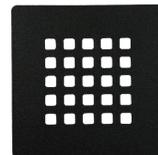

Matte Black

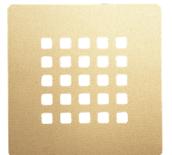

Satin Brass

# INSTALLATION GUIDELINES

## Glass Door Compatibility

Neostone bases are designed for use with glass shower doors.

When using a sliding glass door with a Linear Drain Base, the door track must be 3 inches wide or less. Must stay a minimum of 3/4" away from base edge when drilling.

## Base Modifications

- Bases can be cut using a concrete blade. Protect the finished surface with tape before cutting.
- Only modify sides that will be covered by the tile flange and finished with tile.
- Maximum trimming allowances:
  - Point Drain Bases:
    - Up to 8 inches from each short side.
    - Up to 2 inches from each long side.
  - Linear Drain Bases:
    - Up to 4 inches from back side opposite the drain.

## Required Installation Items (Added to Order)

- Oatey PVC No-Caulk Drain - Compression fitting allows easy connection to plumbing.
- Liquid Nails Heavy Duty Adhesive - Used to install the base to the subfloor with dollops every 4 inches.
- 100% Silicone Caulk - Apply a continuous bead to install the tile flange to the top edge of the base.
- Schluter Kerdi-Band (Optional) - Install 2 inches under the entry point and 2 inches outside for additional waterproofing.

## Installation Notes

- The subfloor must be level before installation.
- If installing with a curb, an additional flange is required and will need to be added to order: Item #APL TILE FLANGE
- Do not use thinset to install the base to the subfloor.
- Plumbing - 2 inch waste pipe can be roughed in flush with the subfloor for both base styles.
- For Linear Drain Bases, the pipe should be located 6 inches off the framing.
- Neostone bases can be ADA compliant if:
  - The subfloor is recessed so the entry height flush.
  - A Schluter prefabricated shower ramp is installed.

## Care & Maintenance

- ONLY use PH Neutral Cleaners.
- NEVER use rough scrub, solvents, alkaline, acid, or abrasive products.
- Residential limited lifetime product warranty against manufacturer defect.